AUTODOC CLUB

How to change pollen filter on **AUDI TT Roadster (8N9)** – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
AUDI TT Roadster (8N9) 1.8 T, AUDI TT Roadster (8N9) 1.8 T quattro

---

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Hatchback (8L1) 1.8

REPLACEMENT: POLLEN FILTER – AUDI TT ROADSTER (8N9). TOOLS YOU NEED:



- Flat Screwdriver
- Fender cover

Buy tools

Replacement: pollen filter – AUDI TT Roadster (8N9). AUTODOC experts recommend:


- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- Please note: all work on the car – AUDI TT Roadster (8N9) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Remove the upper seal from the firewall.

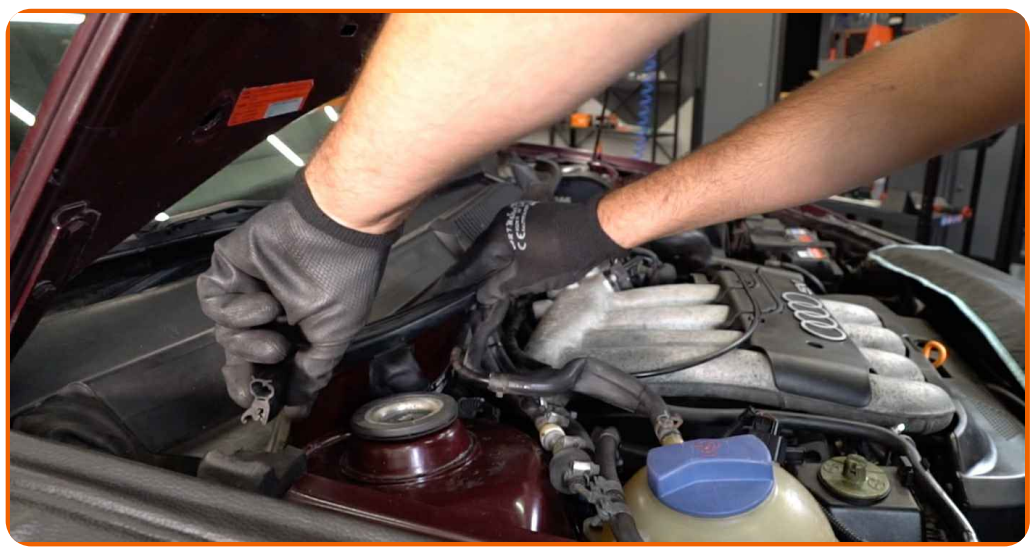


4 Raise the waterproof insulation.

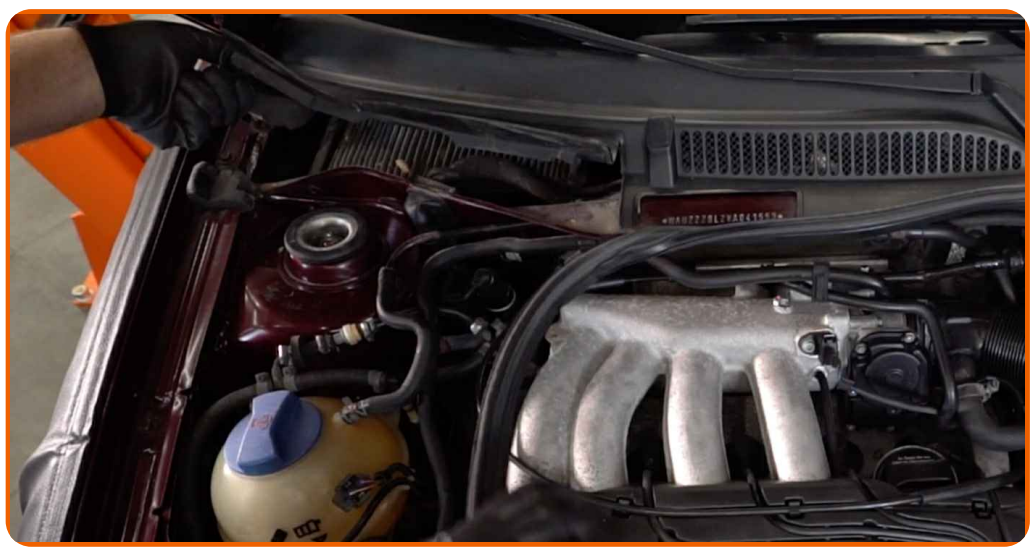

5 Disconnect the wiring harness from the engine bulkhead and take the wiring out.

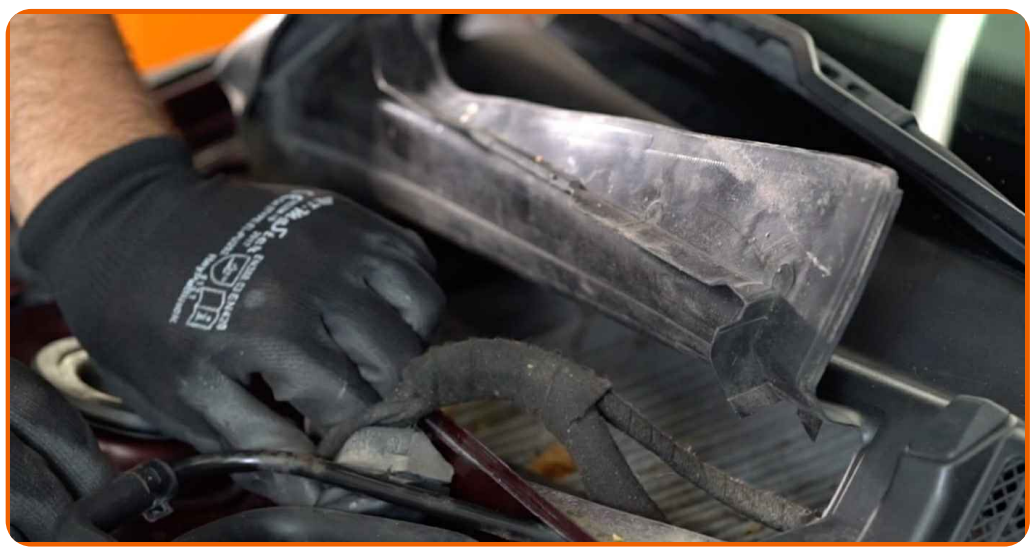

6 Remove the cabin filter.

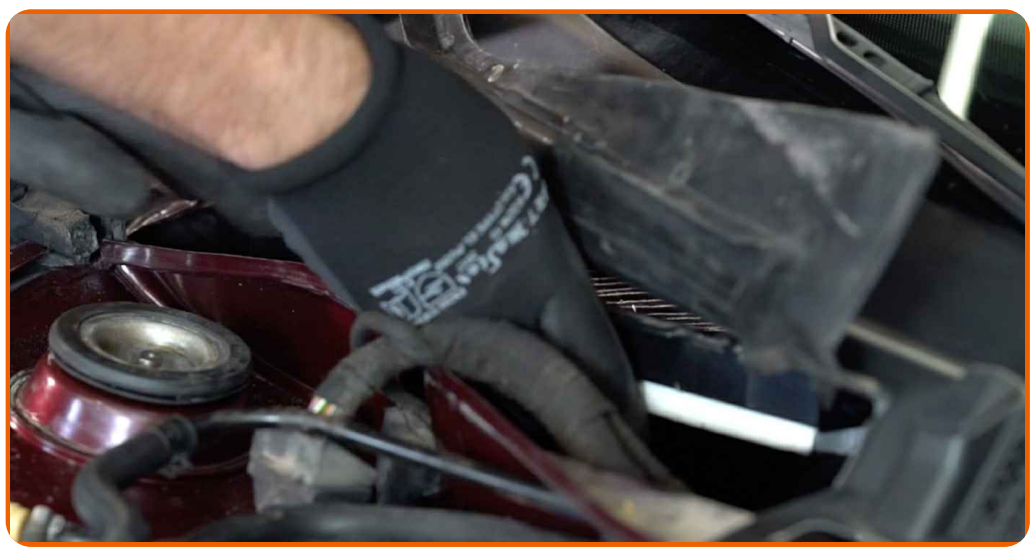

7 Remove the cabin air filter housing.



8 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: pollen filter – AUDI TT Roadster (8N9). Be sure to position the filtering element correctly. Avoid misalignment.

9

Clean the cabin filter housing and cover.




Replacement: pollen filter – AUDI TT Roadster (8N9). Tip from AUTODOC experts:

- Remove any debris from the cabin filter housing carefully to prevent contamination of the ventilation duct.
- Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.

10

Install the cabin filter to its mounting seat.

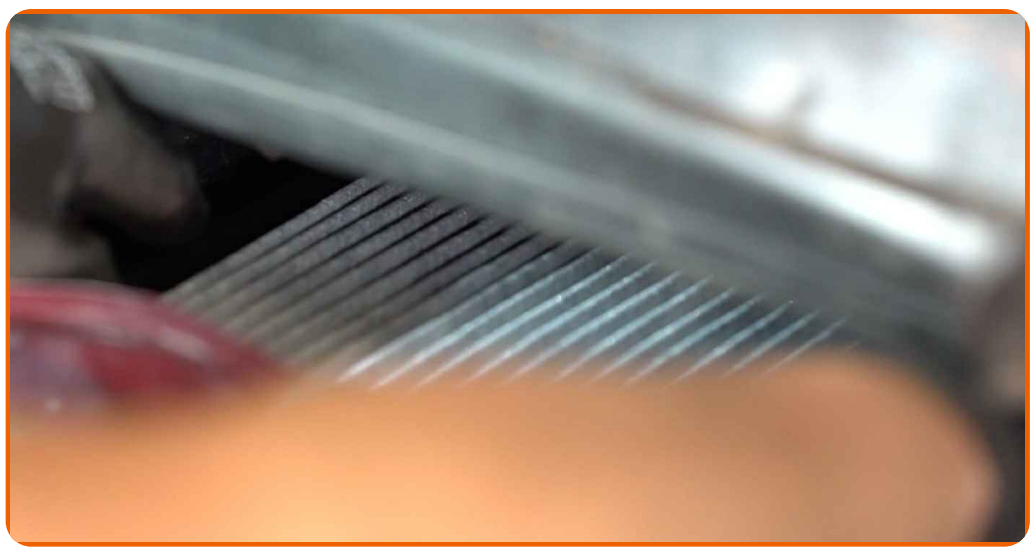

AUTODOC recommends:

- AUDI TT Roadster (8N9) – It's important to only use high-quality filters.

11 Connect the wiring harness to the bulkhead and fasten it.



12 Lower the waterproof insulation.



13 Install the upper seal on the firewall.



14 Remove the fender protection cover.

15 Close the hood.

WELL DONE!



VIEW MORE TUTORIALS

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.